


QUICK STARTER GUIDE

SSW02



INDEX

 ENGLISH	----- 1 - 12
---	--------------

Your watchphone

Keys and parts

- A** Touch screen
- B** Micro USB port
- C** On / off key
- D** Microphone
- E** Speaker



1. Insert micro SD card and SIM card



WARNING

 
Switch off the watchphone before taking out the battery!





1




2



3

  

4

 

5


 


6



Put it in the bottom first!

2. Charge the battery

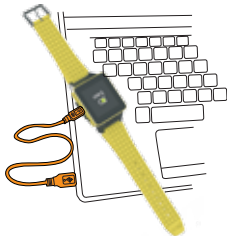

3. Switch on




Long press the On / Off key




4. Main screen operation

Analog
Clock

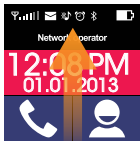

Main
Menu

Main
Menu

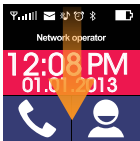


Toggle

Main menu operation

Slide 1

Slide 2

Slide 3

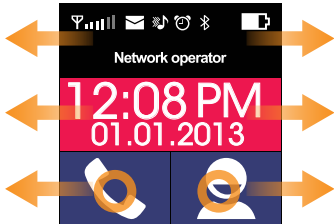

Toggle operation

Bluetooth
off



Bluetooth
on

Flight mode
off



Flight mode
on

Vibrate &
ring




Vibrate
only





silent

Program operation

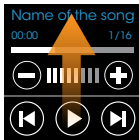

Options/
Settings

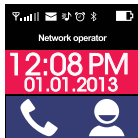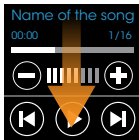

Menu features



Slide 1




Slide 2



Slide 3

- Messages Create, send and manage SMS/MMS.
- Calls Access missed, received and dialled calls
- Photos Image viewer
- Music Music player
- Player Video player
- FM FM radio player
- Recorder Sound recorder
- Files File manager
- Stopwatch Typical stopwatch, multi stopwatch
- Alarm Alarm clock
- Services Access the internet (WAP)

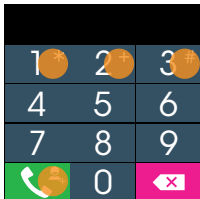

- A Long press for "*"
- B Long press for "+"
- C Long press for "#"
- D Long press for adding to contact

Product and safety information



For more information about your Watch Phone download the complete manual from our website

Warning and Disclaimer

Do not use or place the Watch Phone under water. Avoid dropping it or stepping on it. Switch your watch phone off in aircraft, near medical equipment, fuel, blasting areas, or chemicals. Your watch phone and its accessories are not toys. Keep it out of the reach of small children and pets! Please stop the car before making or answering phone calls. Do not attempt to repair the watch phone yourself in case of damage or malfunction, as this will void the warranty.

FCC DECLARATION

This device has been tested and found to comply with the standards for a Class B digital device, pursuant to article 15 of the FCC Rules.

DECLARATION OF CONFORMITY

"Hereby, Burg China Connection declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.



For the electrostatic discharge (ESD) test of EN55024, it was found that manual operation (by switching power ON/OFF switch) is needed to resume normal operation as intended after the test.

